

Work Order ID 56635

March 3, 2010 8:56:27 AM



Page 1

Item ID: D3272-1

Accept



Setup Start



Revision ID:

Stop



Item Name: Step

Start Date: 3/15/10

Start Qty: 11.00



Cust Item ID:

Required Date: 3/26/10

Req'd Qty: 11.00



Customer:

Reference:

Run Start



Approvals:

Process Plan: *W*

Date:

Tooling:

Date:

Stop



QC:

Date:

SPC (Y/N):

Date:

Sequence ID/
Work Center IDOperation
DescriptionSet Up/
Run HoursDraw
NumberDraw
Rev.Plan
CodeAccept
QtyReject
QtyReject
NumberInsp.
Stamp

Draw Nbr

Revision Nbr

D3272

Rev B

100

0.00



Large Fab

Large Fab

Memo

0.00

SQUARE ONE END BEFORE CUTTING OTHER END

1-Cut D2622-120 extrusion to 116.25" long as per Dwg D3272 using cutting table setup DT 8185-2A

2-Drill extrusion as per Dwg D3272 using Jig DT8680 for rivets.

3-Deburr

10-03-18

110

QC5- Inspect part completeness to step on W/O

0.00



QC

Memo

0.00

Quality Control

*Solo 1/18**(110)*

Work Order ID 56635

March 3, 2010 8:56:27 AM



Page 2

Item ID: D3272-1

Accept



Setup Start



Revision ID:

Item Name: Step

Stop



Start Date: 3/15/10

Start Qty: 11.00



Cust Item ID:

Required Date: 3/26/10

Req'd Qty: 11.00



Customer:

Reference:

Approvals:

Process Plan:

Date:

Tooling:

Date:

Run

Start



QC:

Date:

SPC (Y/N):

Date:

Stop

Sequence ID/
Work Center IDOperation
DescriptionSet Up/
Run HoursDraw
NumberDraw
Rev.Plan
CodeAccept
QtyReject
QtyReject
NumberInsp.
Stamp

120



Packaging

Identify as per dwg & Stock Location: WA

0.00

10.03.18100

Memo

0.00

Packaging

130



QC

Quality Control

QC21- Final Inspection - Work Order Release

0.00

Memo

0.00

10/03/24 MF
10-3-18

Picklist Print

March 3, 2010 8:56:26 AM

Page 1

Work Order ID: 56635



Parent Item: D3272-1



Parent Item Name: Step


Start Date: 3/15/10

Required Date: 3/26/10

Comments: IPP Rev:A New Issue 07-06-09 JLM

Start Qty: 11.00

Required Qty: 11.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D2622-120C  Step Extrusion		Manufactured	No			100	Each	141.2400	11.0000			



3/10.03.18

Warehouse

Loc Qty

Loc Code

Location

Main Warehouse

WA

141.24

48612

3.12

52026

15.12

55214

123

11



DESIGN <i>qp</i>	DRAWN BY <i>B</i>	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>LE</i>	APPROVED <i>H</i>	DRAWING NO. D3272	REV. B SHEET 1 OF 3
DATE 07.05.18		TITLE STEP ASSEMBLY, HI LONG SCALE NTS	
A	04.03.01	NEW ISSUE	
B	07.05.18	D3272-1 WAS D2622-120	

RELEASED

07.06.04 *H*

QTY -041	QTY -042	PART NUMBER	DESCRIPTION
X		D3272-041	STEP ASSEMBLY, HIGH LONG (LH)
	X	D3272-042	STEP ASSEMBLY, HIGH LONG (RH)
1	1	D3065-041	LEG ASSEMBLY
2	2	D3066-1	SPACER
2	2	D3067-1	END PLATE
2	2	D3219-1	SUPPORT
1	1	D3272-1	STEP
16	16	MS20600AD4W4	RIVET

GENERAL NOTES:

- 1) D3272-041 SHOWN. FOR D3272-042, INSTALL D3219-1 SUPPORT OPPOSITE SIDE
- 2) WELD PER DART QSI 004
- 3) FINISH: CHEMICAL CONVERSION COAT PER DART QSI 005.4.1
POWDER COAT ASSEMBLY WHITE (4.3.5.1) PER DART QSI 005 4.3
BLACK ANTI-SKID PAINT PER DART QSI 005 4.4
- 4) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED.
- 5) ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.
- 6) BREAK ALL SHARP EDGES 0.005 TO 0.010 MAX.


WLB 86635

Copyright © 2004 by DART AEROSPACE LTD


THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

DART

DESIGN	AP	DRAWN BY	JB	DART AEROSPACE LTD
CHECKED	CE	APPROVED	JB	HAMKESBURY, ONTARIO, CANADA
DATE	07.05.18	DRAWING NO.	D3272	REV. B
		TITLE	STEP ASSEMBLY, HI LONG	SHEET 2 OF 3
				SCALE 1:20

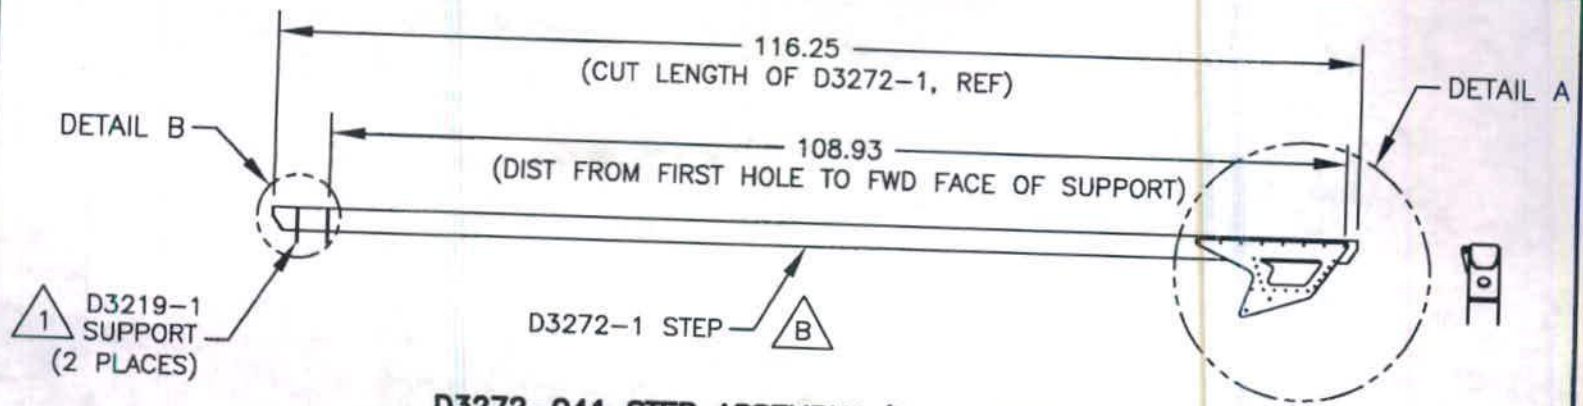

D3272-041 STEP ASSEMBLY (LH. SHOWN)
D3272-042 STEP ASSEMBLY (RH, OPPOSITE)

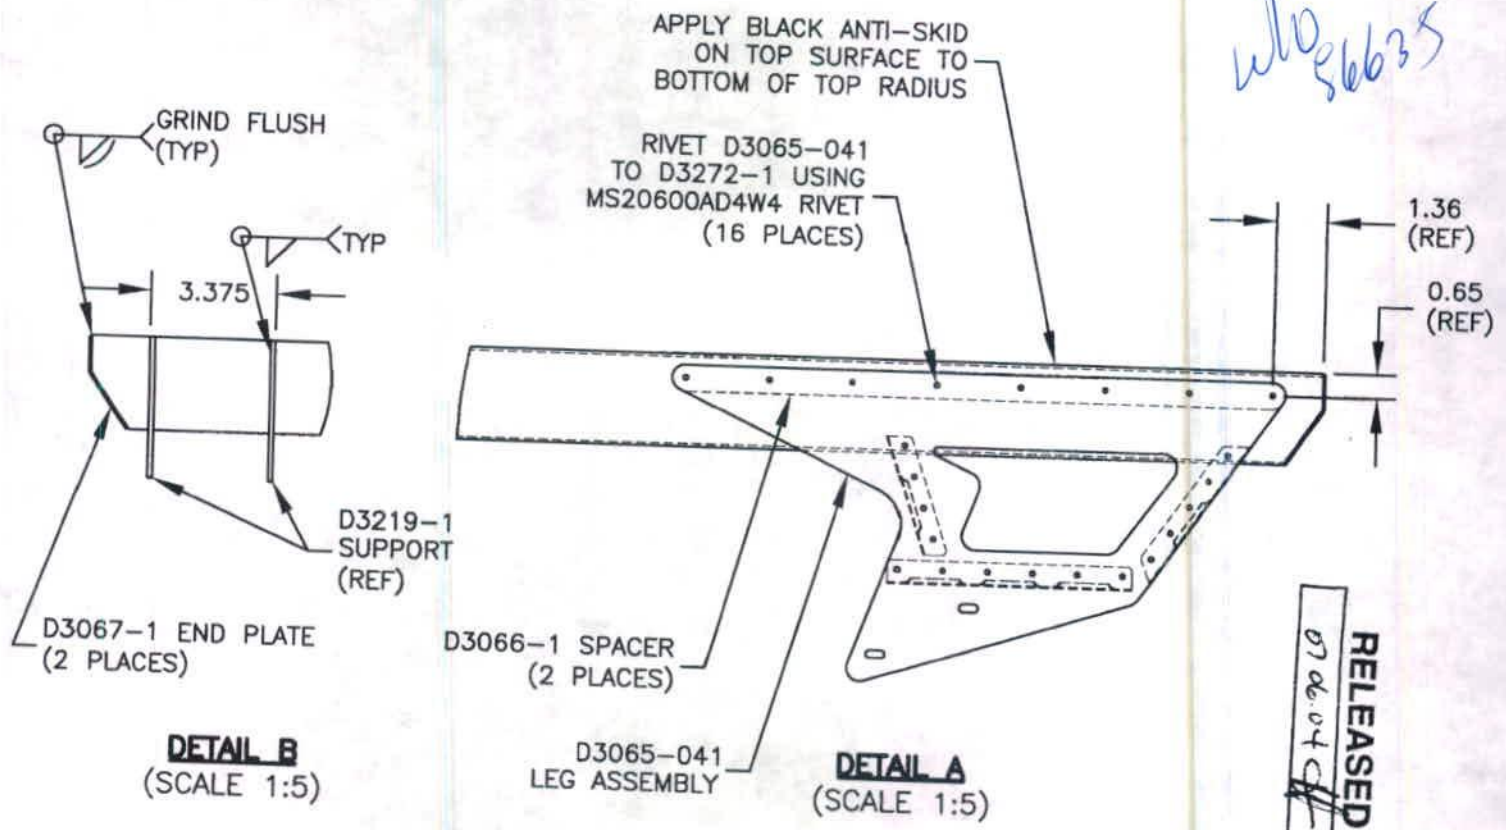


THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.


Copyright © 2004 by DART AEROSPACE LTD

DART

DESIGN	AP	DRAWN BY	JB	DART AEROSPACE LTD
CHECKED	CE	APPROVED	JB	HAWKESBURY, ONTARIO, CANADA
DATE	07.05.18	DRAWING NO.	D3272	REV. B
		TITLE	STEP ASSEMBLY, HI LONG	SHEET 3 OF 3
				SCALE 1:20

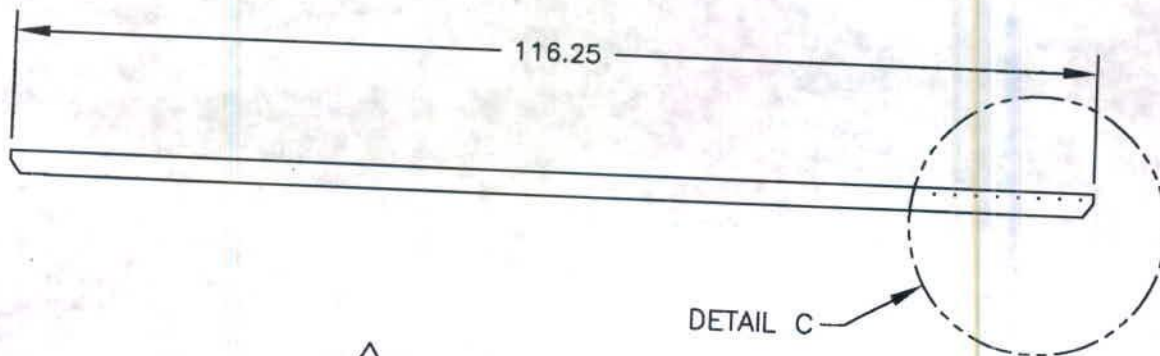

B D3272-1 STEP
(MAKE FROM D2622-120 STEP EXTRUSION)

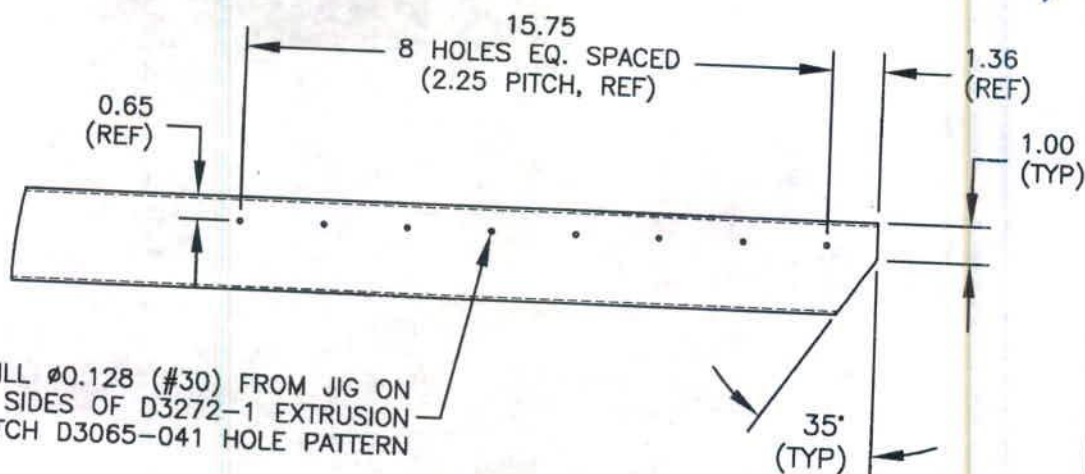

DRILL $\phi 0.128$ (#30) FROM JIG ON
BOTH SIDES OF D3272-1 EXTRUSION
TO MATCH D3065-041 HOLE PATTERN

DETAIL C
(SCALE 1:5)

RELEASED

07.06.04

WLB
56635

